




Roman blind

Ways of dimensioning

1. Installation on window frame

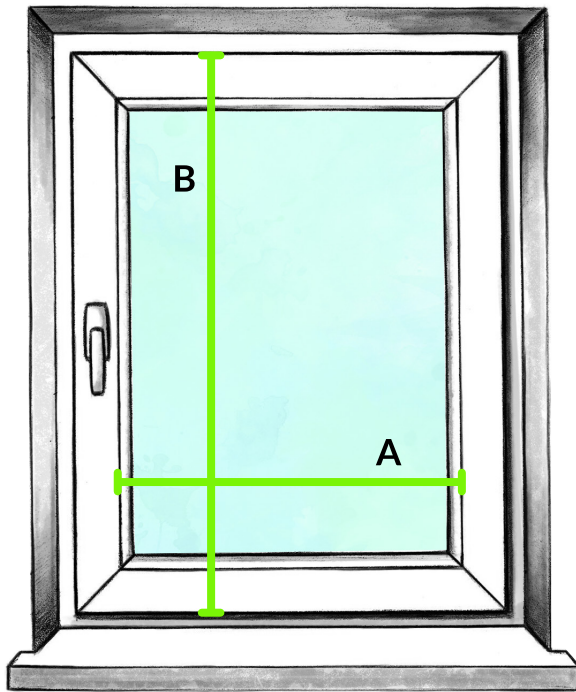


Non-invasive option with lines

A. The width with glazing beads

B. The height from top to bottom edge of frame

2. Invasive installation to glazing bead

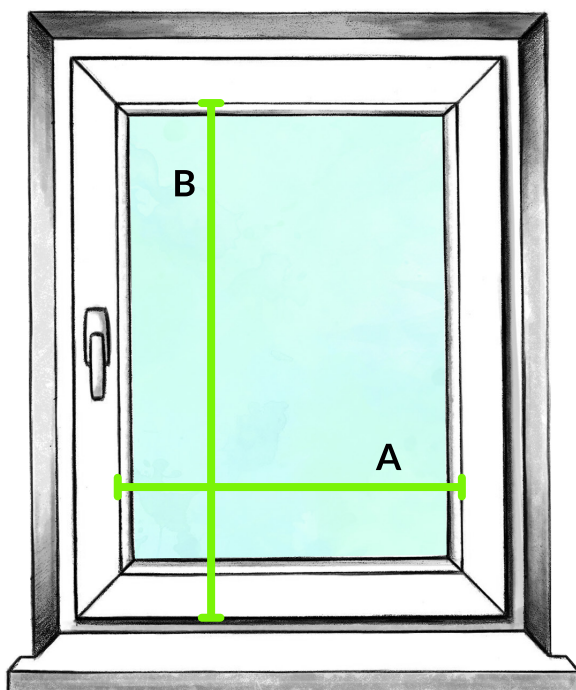

A. The width with glazing beads


B. The height from top edge of glazing bead to the end of bottom edge of bead or bottom edge of window frame



Roman blind

Ways of dimensioning

3. Installation in niche

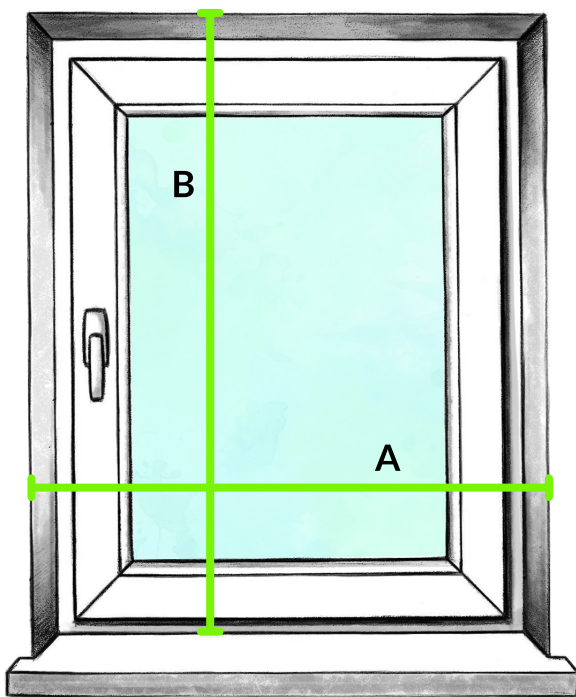


A. The width of niche minus 1-2 cm

B. The height minus 1-2 cm

Precise measurement of the width of niche on three levels (top, middle, bottom) and the height on both sides of niche

2. Installation on ceiling or on wall

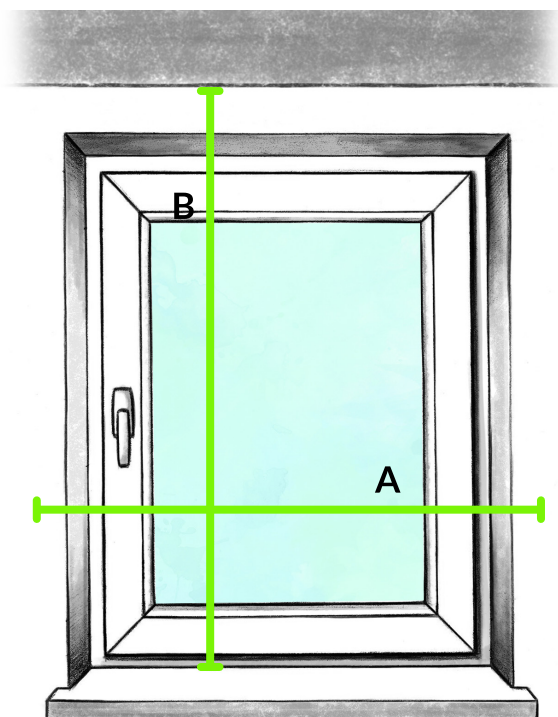

A. The width of niche plus minus 6 cm

B. The height of niche plus the height of lintel minus 1-2 cm

To open window freely, attention should be paid to the height of the packet (from 17 to 30 cm)